



TG-K3/NTC10-01

Duct sensor with cable

Temperature sensor with NTC10 element for air temperature measurement in ventilation ducts.

- **Adjustable insertion length**
- **Supplied with 1.5 m cable**
- **Simple and quick installation**
- **IP20**

Duct sensor with cable for mounting in ventilation ducts.

The sensor is compatible with Aquatrol, Johnson Controls, Satchwell, Trend, Cylon and Honeywell.

Technical data

| | |
|-------------------|--|
| Temperature range | -30...+70°C |
| Compatible with | Aquatrol, Johnson Controls, Satchwell, Trend, Cylon, Honeywell |
| Sensor element | NTC 10k3A1, 10 kΩ/25°C |
| Cable length | 1.5 m |
| Insertion length | 15...140 mm |
| Time constant | 50 s |
| Protection class | IP20 |


| Temperature (°C) | Resistance (Ω) |
|------------------|----------------|
| 15 | 15714 |
| 10 | 19903 |
| 5 | 25395 |
| 0 | 32651 |
| -5 | 42317 |
| -10 | 55304 |
| -15 | 72911 |
| -20 | 97006 |
| -25 | 130306 |
| -30 | 176803 |

| Temperature (°C) | Resistance (Ω) |
|------------------|----------------|
| 70 | 1752 |
| 65 | 2082 |
| 60 | 2467 |
| 55 | 2985 |
| 50 | 3601 |
| 45 | 4367 |
| 40 | 5325 |
| 35 | 6530 |
| 30 | 8056 |
| 25 | 10000 |
| 20 | 12493 |

Material

| | |
|----------------|--------------|
| Pipe | ABS, top PA6 |
| Mounting plate | PVC |
| Cable | PVC |

Dimensions (mm)

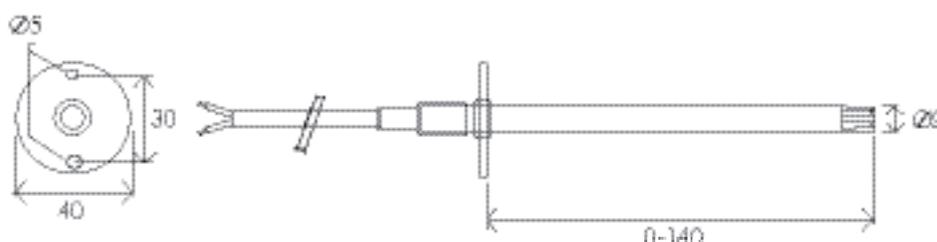

When sensor is used to measure temperature after pre-heater in outdoor air duct:

Go to **Input** menu. Select **ANALOG** tab. Select the analog input to which the extra controller temperature sensor is connected. Example if it is connected to AI6 on the connection board, then select **ANALOG INPUT 6** and select **Extra Controller Temperature Sensor (ECT)** from the input type list.

When sensor is used in a duct as a replacement for internal supply air temperature sensor and connected to connection board:

Go **Input** menu. Select **ANALOG** tab. Select the analog input to which the supply air temperature sensor is connected. Example if it is connected to AI6 on the connection board, then select **ANALOG INPUT 6** and select **Supply Air Temperature Sensor (SAT)** from the input type list. Internal supply air temperature sensor have to be disabled first (by default configured as AI2) before it can be selected anywhere else.