

Motion Detection Sensor (MDS) Kit

Installation & User manual

MCR-SMD

- Thank you for purchasing this Samsung Product.
- Before operating this unit, please read this user manual carefully and retain it for future reference.



DB68-07694A-00

SAMSUNG

Contents

Safety Information	3
Safety Information	3
Installation	4
Installation	4
MDS Kit	
Accessories	
Installing the MDS Kit	
Installation troubleshooting	
Operation	6
Operation	6
Turning the MDS Kit on or off	
Setting the MDS Kit installation option	
Samsung comfort control features	
Operation troubleshooting	

Safety Information

This manual explains how to install a Motion Detection Sensor (MDS) kit onto an indoor unit and how to use it. Please read this manual thoroughly before installing and using the MDS Kit.

WARNING

Hazards or unsafe practices that may result in severe personal injury or death.

CAUTION

Hazards or unsafe practices that may result in minor personal injury or property damage.

WARNING

 **Contact a qualified installer or a service center for the installation.**

When detaching or disposing of an MDS Kit, contact a qualified installer or a service center.

- Failing to do so may result in electric shock, fire, explosion, problems with the product, or injury and may also void warranty on the installed product.

Install an MDS Kit securely in a designated place, using the installation accessories.


- If the MDS Kit is not installed securely, the component might fall off and get damaged.

 **Do not attempt to repair, disassemble, or modify the appliance yourself.**

- Failing to do so may result in product malfunction, electric shock, or fire.
So when repairing the product, contact a qualified installer or a service center.

Installation

MDS Kit

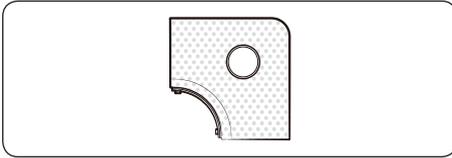

Accessories

Item	Connection wire	Cable tie	Installation manual/User manual
Quantity	1	2	1
Shape			

CAUTION

- When installing the MDS Kit, be sure to use the kit and accessories designated by Samsung.


Installing the MDS Kit

- If the panel is already installed onto the indoor unit, remove it from the indoor unit. For more information about removing the panel, refer to the Panel installation manual.


CAUTION

- Be sure to install the MDS Kit onto the panel while it is disassembled from the indoor unit.

- Remove the corner cover from the panel, located at the opposite diagonal corner of the panel display.

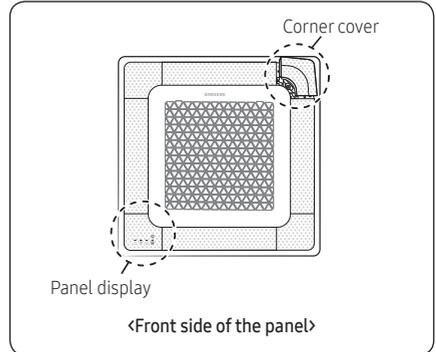


- Mount the MDS Kit onto the same location.

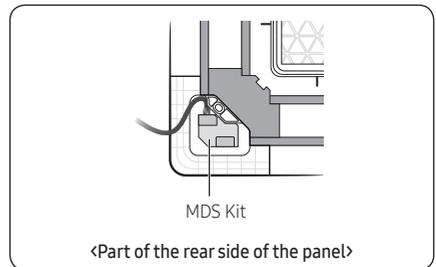


NOTE


- The MDS Kit cannot be installed onto any location other than the designated one.
- Arrange the connection wire:
 - Push the hook ① on the cover-back.
 - Lift up the cover-back in the direction of arrows ② as shown in the figure.

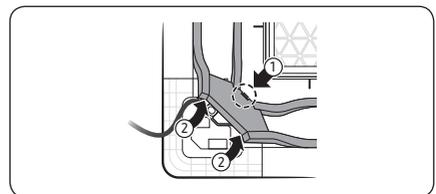


- c Arrange the connection wire using the supplied cable ties so that, when the cover-back is back in place, it is located under the cover-back.
- d Lower down the cover-back so that it is in place.

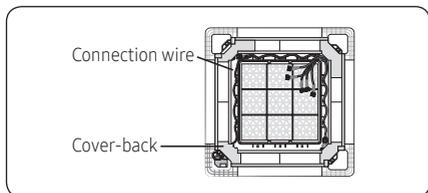

- 5 Connect the connection wire to the indoor unit PBA. When connecting the wire to the indoor unit PBA, check the colors and numbers of the pins on the terminal.

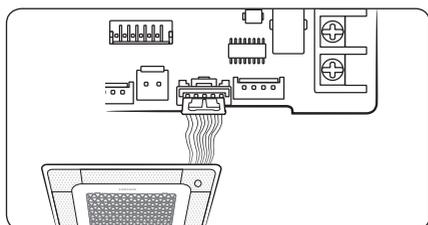

- 6 Assemble the panel onto the indoor unit. For more information about assembling the panel, refer to the Panel installation manual.

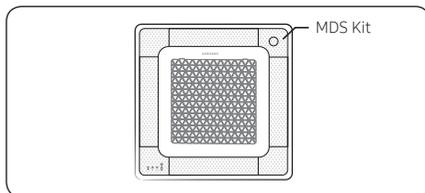

- 7 Set the MDS Kit installation option using the wired or wireless remote control.

NOTE

- Because the indoor unit ships with the MDS Kit installation options set to "Disuse", you must change the value of the MDS Kit installation option.
- For more information about how to set the MDS Kit installation options, see **Setting the MDS Kit installation option** on page 7 and the indoor unit installation manual.
- Enter the installation option value more than twice.
- After entering the installation option value, reset the indoor unit to check for correct operation.

Installation troubleshooting

Abnormal conditions	LED lamp display				Remarks
	Operation	Defrost	Timer	Filter	
MDS Kit error indication (displayed on the indoor unit)		X	X		

● On ◐ Flickering X Off


If you turn off the air conditioner when an LED is flickering, the LED is also turned off.

Operation

Turning the MDS Kit on or off

Using wired remote control

Press the MDS button on the wired remote control to turn the MDS Kit on or off.

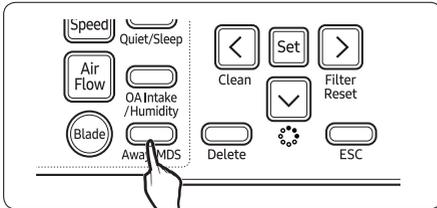

NOTE

- The wired remote control must be installed together with the indoor unit.

MDS Button Click 	Once	Twice	Three times
Display	Indirect	Direct	-
Standard Mode	MDS On (only Turn off the set)		MDS Off
Premium Mode	Indirect Flow Control	Direct Flow Control	MDS Off

Using wireless remote control

Indirect function with Motion detection feature



Direct function with Motion detection feature



Option Selection	Indirect	Direct	No Selection
Standard Mode	MDS On (only Turn off the set)		MDS Off
Premium Mode	Indirect Flow Control	Direct Flow Control	MDS Off

NOTE

- In the Standard mode, Indirect/Direct is displayed on the wireless remote control, but does not operate.
- The Indirect/Direct function is supported only in the Premium mode.

Setting the MDS Kit installation option

Set SEG23, the MDS Kit installation option of the indoor unit where the MDS Kit is installed, to the desired value with referring to the table below.

Function	SEG23	Soft Off + Hard off	SEG23	Soft Off only
		0	Disuse	
Standard	1	Off after 20 min. (from the last motion detection)	7	Off after 20 min.
	2	Off after 40 min.	8	Off after 40 min.
	3	Off after 80 min.	9	Off after 80 min.
Premium	4	Off after 20 min.	A	Off after 20 min.
	5	Off after 40 min.	B	Off after 40 min.
	6	Off after 80 min.	C	Off after 80 min.

SOFT OFF: The indoor unit turns off its operation at the indicated time in the table for Installation Option after its final motion detection. But, it turns on again if the MDS detect motion.

HARD OFF: Designated time after SOFT OFF, it cannot turn on automatically when it detect motion. Users should control to turn on the indoor unit with remote controller, etc.

NOTE

- Detectable MDS area: 6 m radius at 2.7 m height.
- When the air conditioner supports the Wind-Free Cooling function, it operates the Wind-Free Cooling function automatically before the air conditioner turns off.
- If it happens repeatedly that the MDS Kit turns the air conditioner off and on, the kit reduces the time taken until the air conditioner is turned off for energy efficiency.
- In the Standard mode, you can only turn on/off the air conditioner.
- In the Premium mode, you can also operate the functions such as turning on/off the air conditioner, comfort temperature and comfort saving controls.
- The MDS sensor may detect other heat sources, not humans, and perform the MDS functions.

MDS Button Click 	Once	Twice	Three times
Standard	Turn on	Turn off	-
Premium	Indirect Flow	Direct Flow	Turn Off

Operation

Samsung comfort control features

The following Samsung comfort control features are activated when SEG23, the MDS Kit installation option of the indoor unit, is set to the Premium mode. For more information about the MDS Kit installation option, see **Setting the MDS Kit installation option** on page 7.

- **Indirect Flow:** When the MDS Kit detects motion, it moves the air flow blades to prevent the breeze from blowing directly toward the specified areas (locations where humans are).
- **Direct Flow:** When the MDS Kit detects motion, it moves the air flow blades to send the breeze directly toward the specified areas (locations where humans are).
- **Comfort Temperature:** When the temperature difference between the upper part and lower part of a room is significant, the MDS Kit moves down the air flow blades to mix airs and consequently to reduce the temperature difference.
- **Comfort Saving:** The MDS Kit detects motion in the room and controls the set temperature (up to the amount of +2°C for cooling, -2°C for heating) to reduce electricity consumption.

Operation troubleshooting

- If the MDS Kit has a connection problem or malfunction, the MDS Kit error E143 is indicated on both the panel display and the wired remote control.
- Although the MDS Kit error occurs, the indoor and outdoor units normally operate without the MDS Kit functions.
- If the MDS Kit error persists, check the wire connection and contact a service center.

SAMSUNG

